


Desono BPAK Installation Guide



PRODUCT DESCRIPTION

The Desono BPAK Backpack Kit allows a Tesira AMP-450BP, AMP-450P, TCM-X or TCM-XA to be attached to the top of a Desono C-IC6 or C-IC6LP back can.

Kit Contents

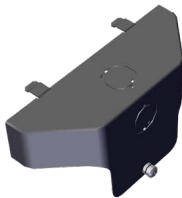

Cover



Clips and M3 screws
(2 each)

Tesira CAT5 Jumper
cable *(not shown)*



C-IC6




C-IC6LP



Tesira Unit
(AMP-450BP shown)

INSTALLATION

1. Attach clips. Installation method is the same for C-IC6LP.

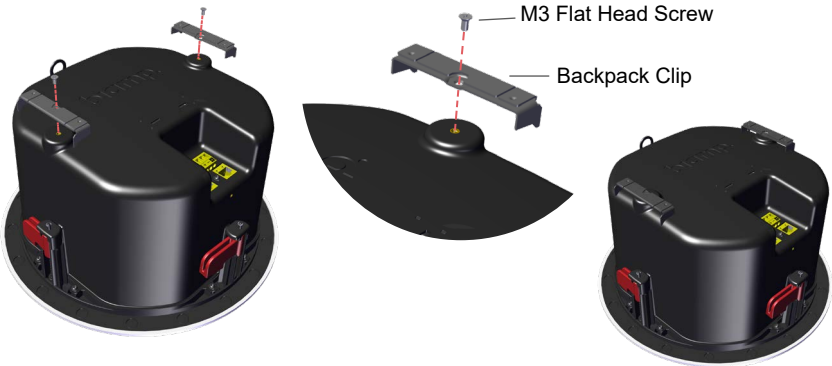

2. Fully slide unit into clips



3. A cover is provided for conduit usage or strain relief. Punch out the cut-out, attach conduit fitting or cable clamp and feed wiring through the opening. Connect wiring per the device instructions. Insert cover tabs into the slots on the Tesira unit and secure the cover with the thumbscrew.

